



PAT 02

External inductive loop

- Connection to HPMV5A1, HPMV5A2, ADV31A001, ADV31A002, ADV31A003, etc....

Connections

- Connector for connecting to the supplied adapter

Mounting

- Cabin roof
- Installation manual N°627

